
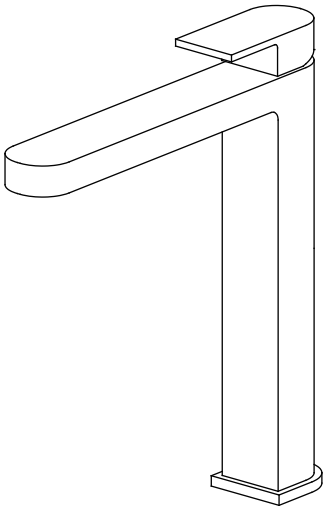
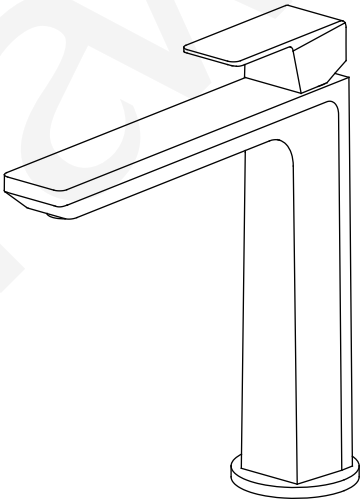


SINK TOWER MIXER

INSTALLATION TO SUIT

A67.08.V3.LH	A69.08.V3	A76.08.V3
A68.08.V3.KN	A74.08.V3	

- Tapware to be installed by a licenced plumber in accordance with AS/NZS 3500:2021
- Recommended working water pressure 150 - 500kPa
- This tap is suitable for high pressure applications where both hot & cold water supply pressures are at 150kpa or above
- Maximum water temperature is 65 deg C
- Flush out pipework prior to new installation
- Please ensure any flow controller incorporated in the outlet be tightened to prevent removal by hand.
- After completing the installation check function of tapware and ensure no water leaks.
- WARRANTY: Please refer to the full warranty statement before installing at <https://astrawalker.com.au/certification-warranty/>

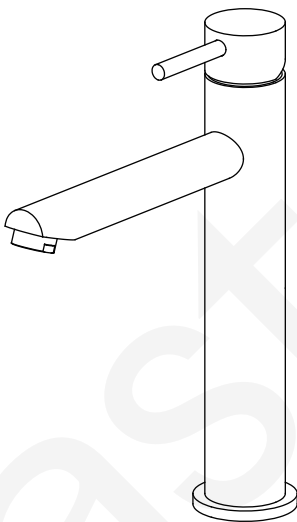

SINK TOWER MIXER

INSTALLATION

1. Screw the flexible hose to the bottom thread of the mixer body.
2. Pass the flexible hose through the hole from the top counter and then install the plastic cover, rubber washer and metal washer in turn.
3. Check the mixer body is right positioned and then tighten the screws.

