

A90.14

PIVOT HINGE

This is a basic guide—some factors can change the installation process.

- 1) Attach the plastic shield and gaskets to the hinge.
- 2) Install the glass. Suitable for glass up to 10mm thick; an extra plastic gaskets is included for thinner panels.
- 3) Secure the hinge plate and spacers with the provided fixings. Tighten the screws with an Allen key to clamp the glass in place.
- 4) Mark the hinge position based on the shower screen location. Ensure clearance under the door or drip rail. Clearances may vary depending on the shower door drip rail supplier.
- 5) Drill holes at the marked spots and insert wall plugs.
- 6) Attach the hinge and glass to the wall using the provided fixings.

Specifications:

Glass Thickness: 8mm to 10mm
Closing Type: Self-centering when within 25° of closed position
Cutout Required: See diagram

Use of Gaskets:

For 10mm Glass: Use one thick gasket on each side
For 8mm Glass: Use one thick and one thin gasket on each side


Mimumum Door Capacities:

Using 2 Hinges: Max Weight (36kg), Max Width (711mm)

Recommendations:

Do not exceed the maximum door capacity weight or width
Do not use power tools when installing these hinges
Fasten all of the fixing screws

Cut out template:
(to scale)

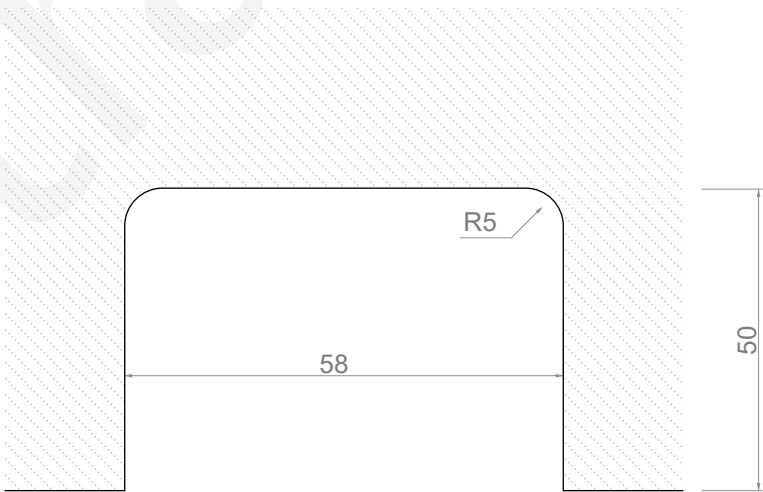

NOTE This product must be installed by a licensed trade